

GENUINE 


Lifting Anchor Systems

Installation Guide



Contents

Lifting Anchor Systems	4
Before Anything	4
Types of Lifting	5
Types of Lifting Anchors	5
Flat Lifting Systems	
Flat Lift Anchors	6
Product Identification (Flat Lift Anchor)	6
Flat Lift Void Formers	7
Installation Process (Flat Lift Anchor Installation)	8
Installation Process (Flat Lift Void Removal)	9
Face Lifting Systems	
Face Lift Anchors	10
Installation Process (Face Lift Anchor Installation)	10
Face Lift Installation Process (Void Removal)	10
Product Identification (Face Lift Anchor)	11
Edge Lifting Systems	
Edge Lift Anchors	12
Product Identification (3Dx™ / SwiftLift™ JAWS™)	13
Product Identification (EdgeMaster™)	14
Installation Process (Edge Lift Anchor Installation)	15

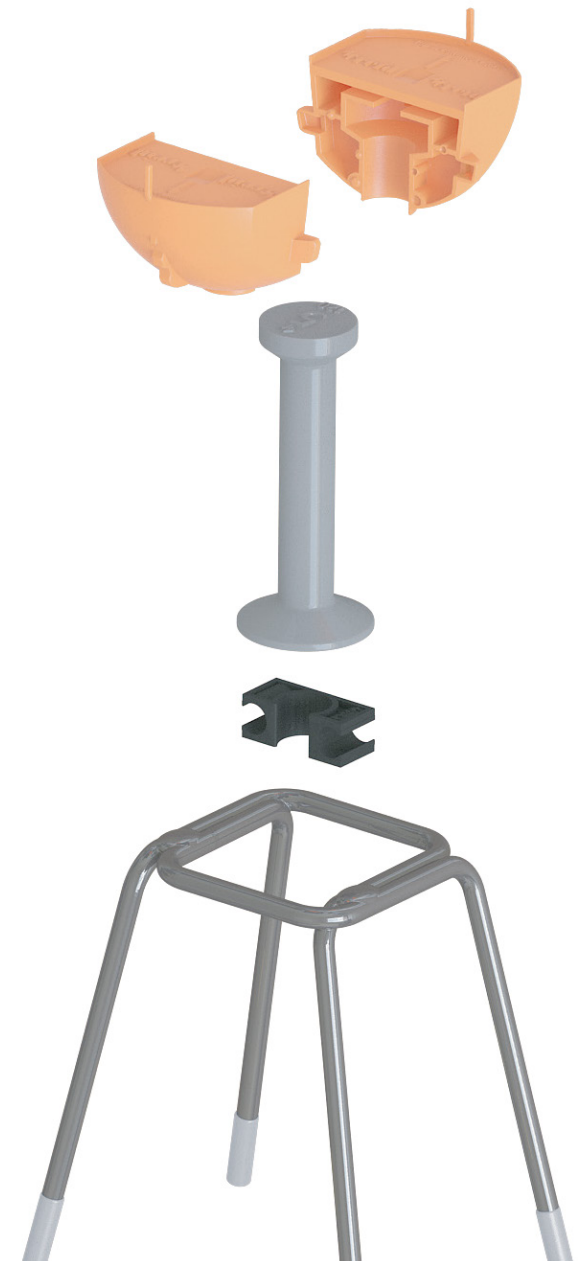

Lifting Anchor Systems



Reid™ has not only has a reputation for quality but also is the longest serving supplier of Concrete Lifting Products in Australia. If your business is lifting precast or tiltup concrete, the range of products offered by Reid is the most comprehensive, researched and tested by any Australian supplier.

AS 3850.1:2015
(+A1:2019) Compliant



Before Anything

1. Be aware of and follow any and all relevant standards, codes of practice and guides
2. Ensure you have all appropriate engineering drawings, including but not limited to certified lifting and bracing designs, which detail load conditions, lifting point rigging and bracing designs.
3. Carry out all lifting and bracing in accordance with certified drawings.
 - a. Any questions pertaining to the drawings must be directed to those who issued them or a suitably qualified engineer.
4. Use only qualified crane companies/operators/individuals and riggers
5. Prior to lifting identify all lifting points, clutches, etc.. are as specified in the certified drawings and are compatible (match). If any component is not as documented, the lift should not continue until reviewed and approved by a competent engineer.
6. Check proof load testing tags on clutches to ensure they are within their annual test date
7. Visually inspect clutches for any wear and tear
8. Maintain a clear/fall zone around planned lift area



WARNING: DO NOT WELD TO LIFTING ANCHORS

Note: Reid does not support welding to any anchor.

Types of Lifting




Flat (or Top) Lift:

Where the initial direction of the lift is in-line with the anchor axis. The lift puts the anchor into tension only.




Shear Lift:

Where the initial direction of the lift is perpendicular to the axis of the anchor. The lift applies a shear load only to the anchor

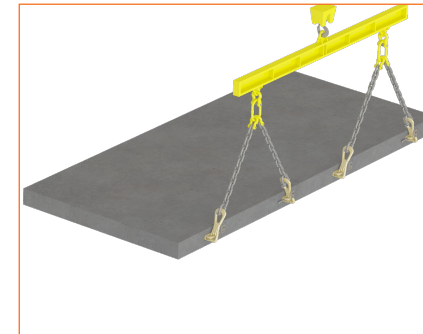

Edge Lift:

The initial direction the lift is transverse to the anchor axis, putting the anchor into shear at the beginning of the lift and moves into tension as the lift is completed.

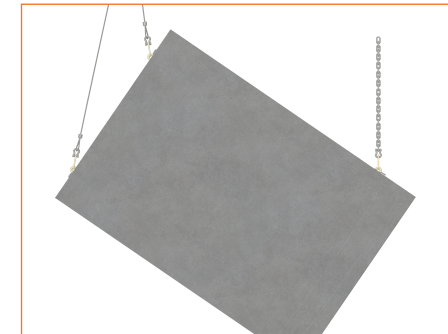


Rotational Edge Lift:


The initial lift is shared by a number of anchors (typically 3). This load puts the anchors into in-plane shear at the beginning and transitions into tension as the load is rotated for placement.

Types of Lifting Anchors


Flat Lift Anchors

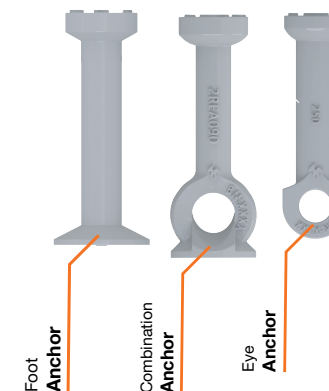

Face Lift Anchors

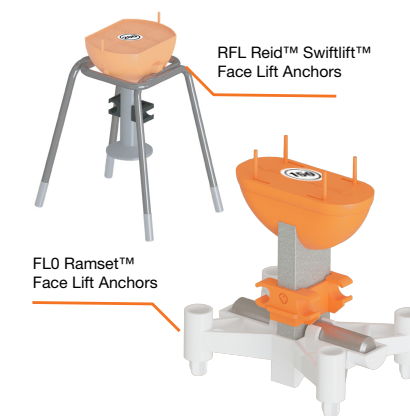

Edge Lift Anchors

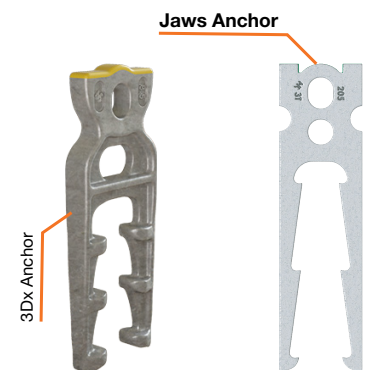

Flat Lift Anchors

These anchors are cast into the precast element with a void former, which once cast & removed, allows the clutch to engage the anchor.

They are used in a variety of elements including pits, lids, culverts, pipes, beams and planks. The type of anchors used will depend on the shape and weight of the element. Both foot and eye anchors have a load range of 1.3t – 32t WLL. It is recommended to use the longest possible anchor available in any size range as foot anchors perform by developing a “pull out cone” in the concrete. The diameter of the cone on the surface can be up to six times the depth of the anchor. The longer (deeper) the anchor, the larger cone.



SwiftLift Combination Anchors
Feature a combined foot and eye. Used with a reinforcing hanger bar they are able to provide deeper anchorage and increased load capacity in thin wall or low strength concrete elements. The cutout foot and saddle like moulded eye opening provide support for the reinforcing hanger bar.



SwiftLift Eye Anchors
Are higher load anchors which provide deeper anchorage and increased load capacity in thin wall or low strength concrete elements.
They are ideal for bridge beams and other heavy precast concrete elements.




SwiftLift Foot Anchors
Consistent with the Reid™ commitment to local testing, SwiftLift™ Foot Anchors have been extensively tested in Australian concrete comprising of over 500 individual tests, and consuming approximately 150 tonnes of concrete.



Product Identification

Flat Lift Anchor ID: Foot, Eye & Combination Anchor Markings

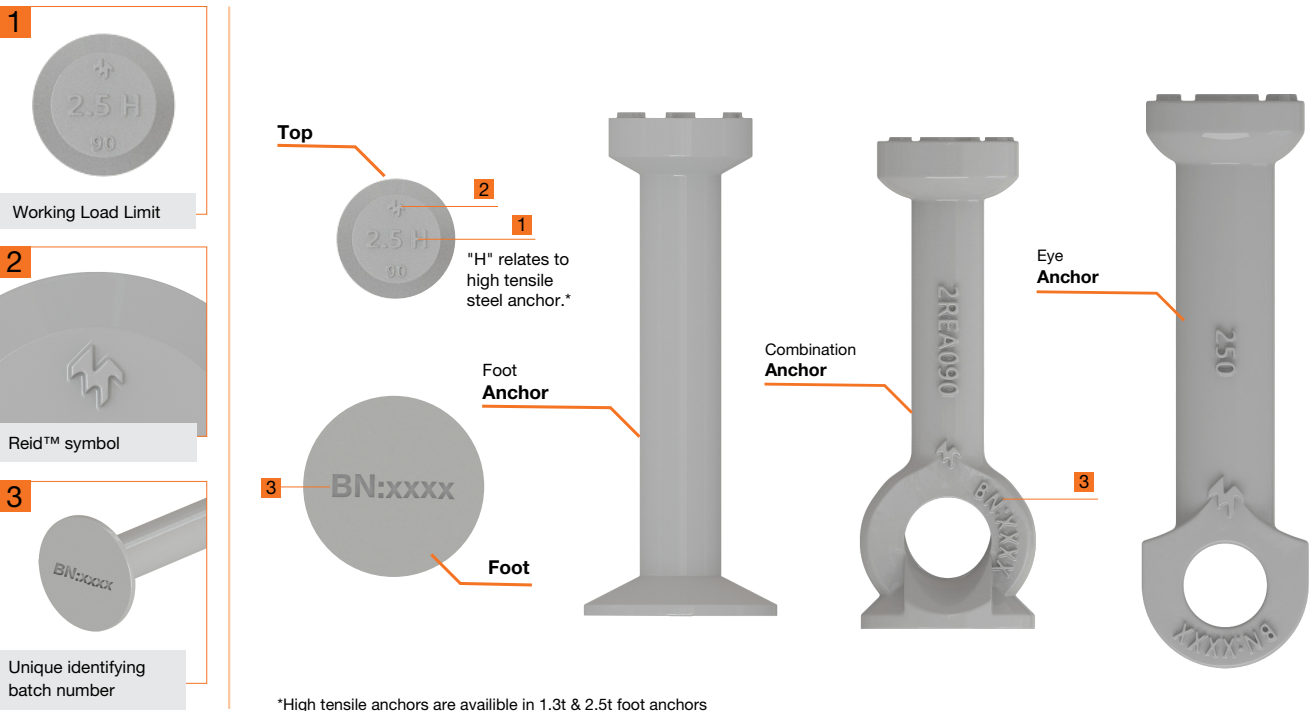

Flat Lift Void Formers

Types Of Flat Lift Void Formers

Reid SwiftLift™ foot and eye anchors can be used with a few different voids formers.

Rubber Round Void Former

- A round void former made from rubber. This produces the exact void in concrete, allowing for the clutch to engage the head of the anchor.
- Supplied with a bolt, wingnut and placards allowing it be fixed to various formwork, ensuring anchor location remains consistent.
- Rubber voids are also able to be “puddled” into wet concrete.
- Available to suit SwiftLift™ anchor sizes 1.3t -32t
- Used in situations where the anchor needs to be located on the top surface of a product (as cast)




Steel Round Void Former

- A steel round void former. This produces the exact void in concrete, allowing for the clutch to engage the head of the anchor.
- Requires rubber ring installed on anchor and fitted into void to ensure correct void development
- Has a long lifespan
- Supplied with threaded base
- Available to suit SwiftLift™ anchor sizes 1.3t-5t
- Used in situations where stripping of formwork without removing the void is required. Typically, when an anchor is inverted & located in the bottom of a product.
- weldable, where permanent void location is required.




Steel Articulated Void Former

- Used as an alternative to rubber void former for a longer service life.
- Available in sizes to suit SwiftLift™ anchor 1.3t-5t
- Used where an anchor needs to be located in the side (anchor is horizontal) of a product (as cast)

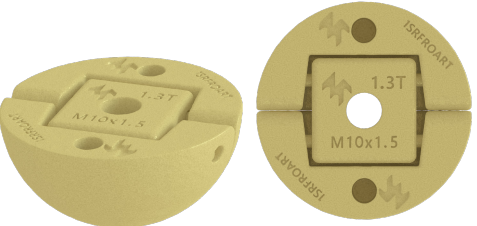

Plastic Void Former

- Designed as single use replacement for rubber void formers
- Manufactured from plastic
- Available to suit SwiftLift™ anchors 2.5t & 5t

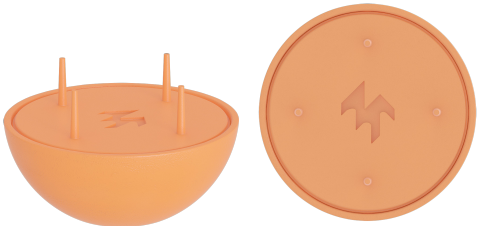

Installation Process

Flat Lift Anchor Installation Foot, Eye & Combination Anchors


Steel Round Void

1. Secure rubber ring around anchor head
2. Secure void to formwork in it's required location.
3. Insert anchor with the attached rubber ring into the void



Articulated Void

1. Open void, allowing anchor to be installed.
2. Insert anchor into void
3. Close void around head of anchor
4. Secure assembled void former to formwork in it's required location. Note, the void will not hold the anchor securely until the assembly has been secured.

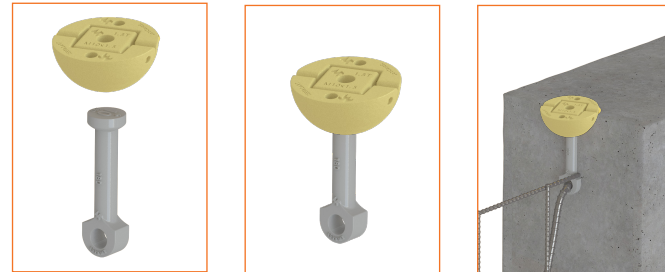


Plastic Void

1. Remove plastic collet from void and attach to anchor head.
2. Insert anchor with attached plastic collet into the plastic void
3. Install in required location



Rubber Round Void

1. Flex the void former open, allowing the anchor to be installed.
 - a. For the most secure attachment, pass the setting bolt through the form and fasten with the wing nut.
 - b. When puddling in the anchor hold the assembled void and anchor by the setting bolt and push into concrete until the face of the void is flush with the surface of the concrete.
3. Place anchor in location in accordance with certified drawings.
4. Vibrate concrete as per standard practices, taking care around the anchor, ensuing and vibrations around the anchor is minimized.

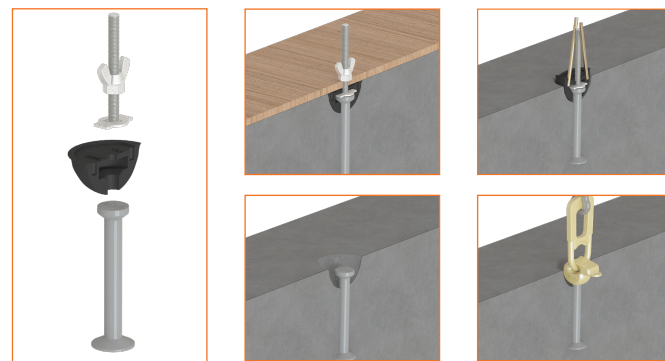

Please Note: All eye & combination anchors require supplementary reinforcement to be installed with the anchor in order to achieve the stated WLL. For more detail refer the Reid eye anchor compliance document.

Installation Process

Flat Lift Void Removal Foot, Eye & Combination Anchors


Rubber Round & Steel Articulated Voids

1. These voids have 2 holes located in the rear of the void, allowing for rods (or similar) to be installed .
2. While rods (or similar) are inserted into the void, cross exposed ends in to a "X," leaving the void ends and allowing it to release the anchor.



Steel Round Void

1. Undo wing nut or setting bolt
2. Remove formwork from concrete
3. Remove void from the head of anchor
4. Remove rubber ring from head of anchor

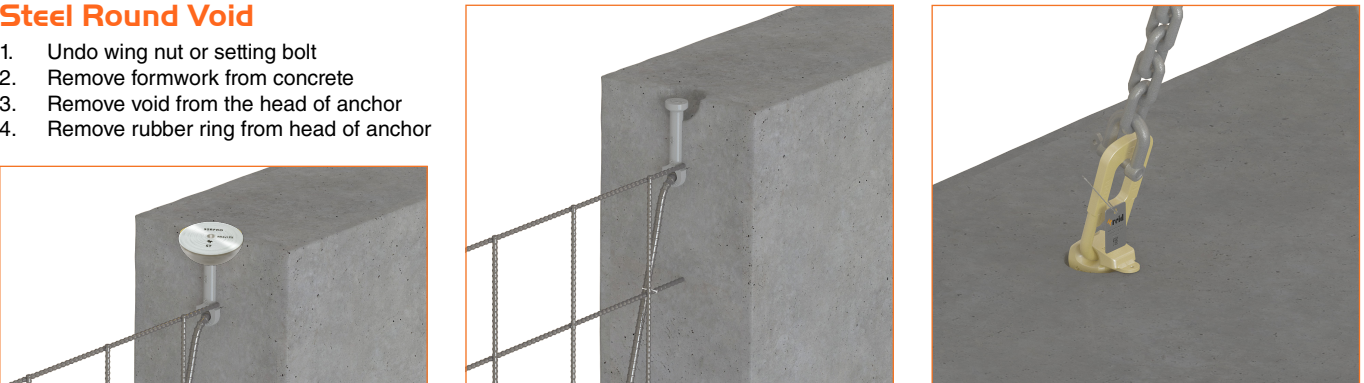


Plastic Void

1. Using a self-drilling hex head timber screw and electric drill, drill into the center of the void
2. When the screw contacts the head of the anchor, stop drilling. Pull on screw and the void will release with ease.
3. Remove void and collet.



Face Lift Anchors

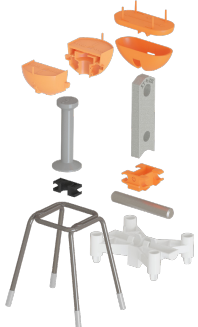

Facelifting is the practice of casting anchors into the near face (as cast) of a panel or similar precast product, allowing for rigging to be connected and product to remain in the same plain or even rotated vertically.

Reid offer 2 full assemblies in the face lift space. These are both rated at 5t WLL, the difference between the two being the clutches which engage the anchor. It is important to be aware of this as the RFL series anchors utilise the 5LE, whereas the FLO50 series anchors use the 3DX85LC. Both assemblies have been designed so as the clutch cannot spontaneously disengage while the system is under load.




AS 3850.1:2015
(+A1:2019) Compliant

Installation Process



Face Lift Anchor Installation RFL & FLO

These anchors come preassembled in common heights (to suit various panel thicknesses); as such there is no need to select or change the void or charring. One simply determines the required location, in accordance with the approved drawings, and places the anchor. One must ensure the anchor is installed with the arrows (located on the void) are pointing to the top or bottom of the panel (as placed). Incorrect installation can result in anchor not achieving full capacity. To further assist in the anchor maintaining it's location over the production process, reid have developed and support the use the floating bar clips. After the anchor is placed, clip in 2 x 12mm x 300mm bars. These bars can be tied directly to adjacent reinforcement, to ensure anchors remain where placed, while the floating bar clip allows for it to still be trafficked.

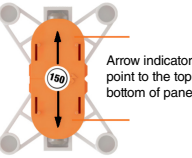




Face Lift Anchor Void Removal RFL & FLO

1. Hammer a flat head screwdriver off centre into the void.
2. Lever void to release.
3. Repeat step 1 on other side.
4. Remove void.

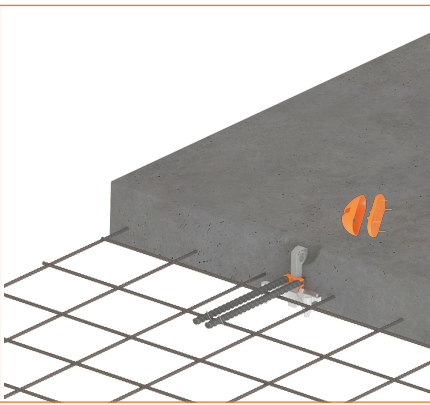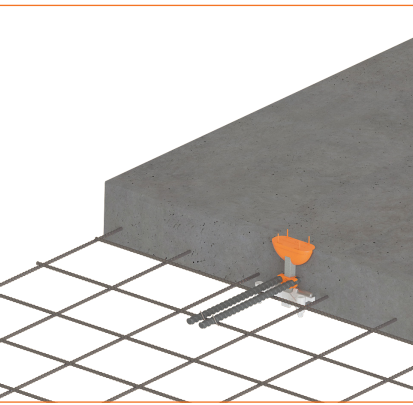

Product Identification




Face Lift Anchor ID: RFL (Reid Face Lift) series

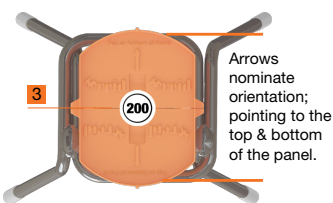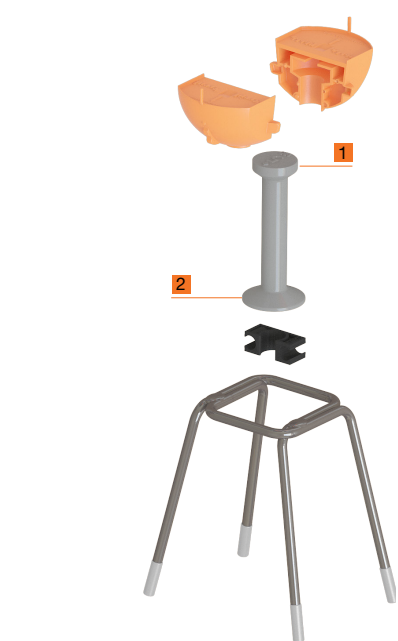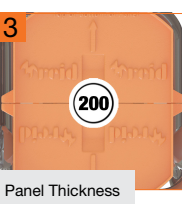

NOTE:
The Reid™ Face Lift Anchor must be placed as per the arrow indicators on the top of the Void Former.



Face Lift Anchor ID: FLO50 (Face lift) series

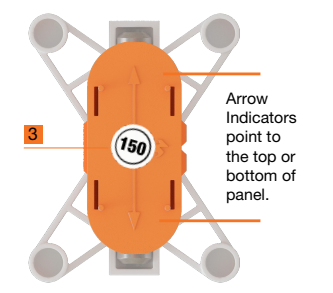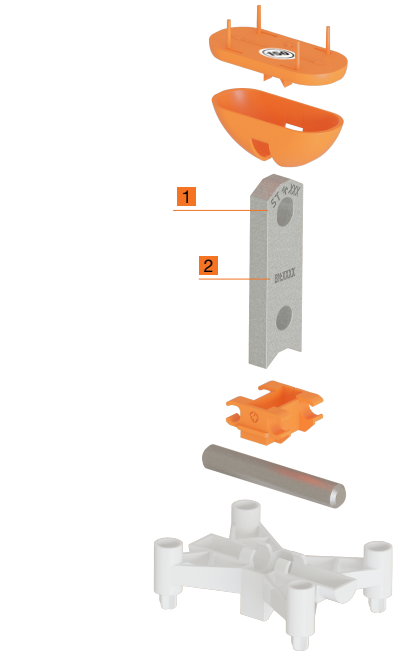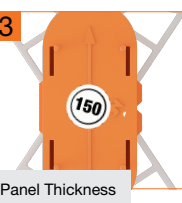

NOTE:
The Ramset™ Face Lift Anchor must be placed as per the arrow indicators on the top of the Void Former.





Edge Lift Anchors


Edgelift anchors are cast into the edge of the precast element.

By utilising this methodology, the anchors being located in the edge of the panel, it removes the anchors from the face of the panel and subsequently the need to grout on exposed faces of panels. Reid offer 3Dx, JAWS & EdgeMaster ranges as edgelifting options. Please refer each ranges compliance document for further information.



3Dx™ Edge Lifting System

Developed, and tested in Australia by Reid™, the 3Dx85 Lifting System provides high lifting capacities and levels of efficiency and productivity. The unique design distributes loads in the concrete in three dimensions, maximising capacity while reducing outward bursting loads and potential panel damage.

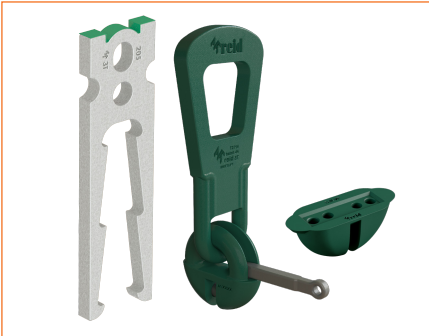


SwiftLift™ JAWS™ Edge Lift Anchor System

JAWS Edge Lift Anchors have been designed in Australia to perform under Australian conditions, in Australian concrete, reinforced with Australian reinforcing bar and mesh.



SwiftLift™ EdgeMaster™ Edge Lift Anchor System

 This assembly consists of a foot anchor along with an intergated shear bar and void former, making it an economical solution for on site panel production. SwiftLift™ EdgeMaster™ have been extensively tested in Australian concrete.




Product Identification

Edge Lift Anchor ID: Reid™ 3Dx™ Edge Lift Anchors




Edge Lift Anchor ID: Reid™ SwiftLift™ JAWS™

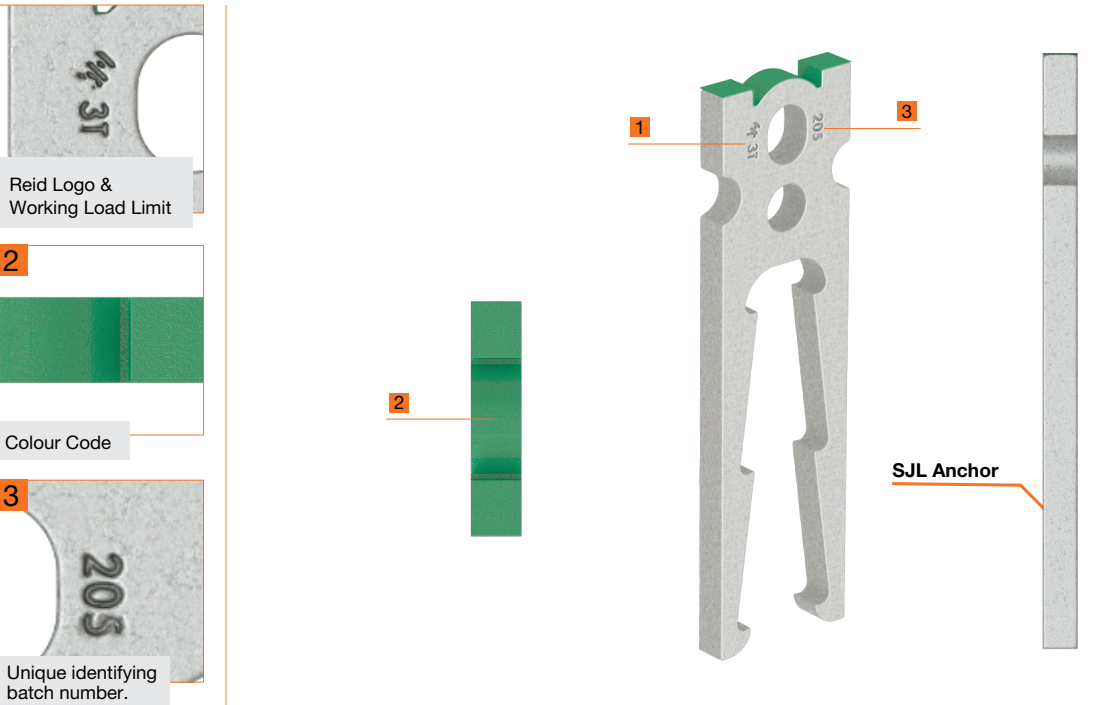

Product Identification

Edge Lift Anchor ID: Reid™ EdgeMaster™ and Foot Anchor Markings

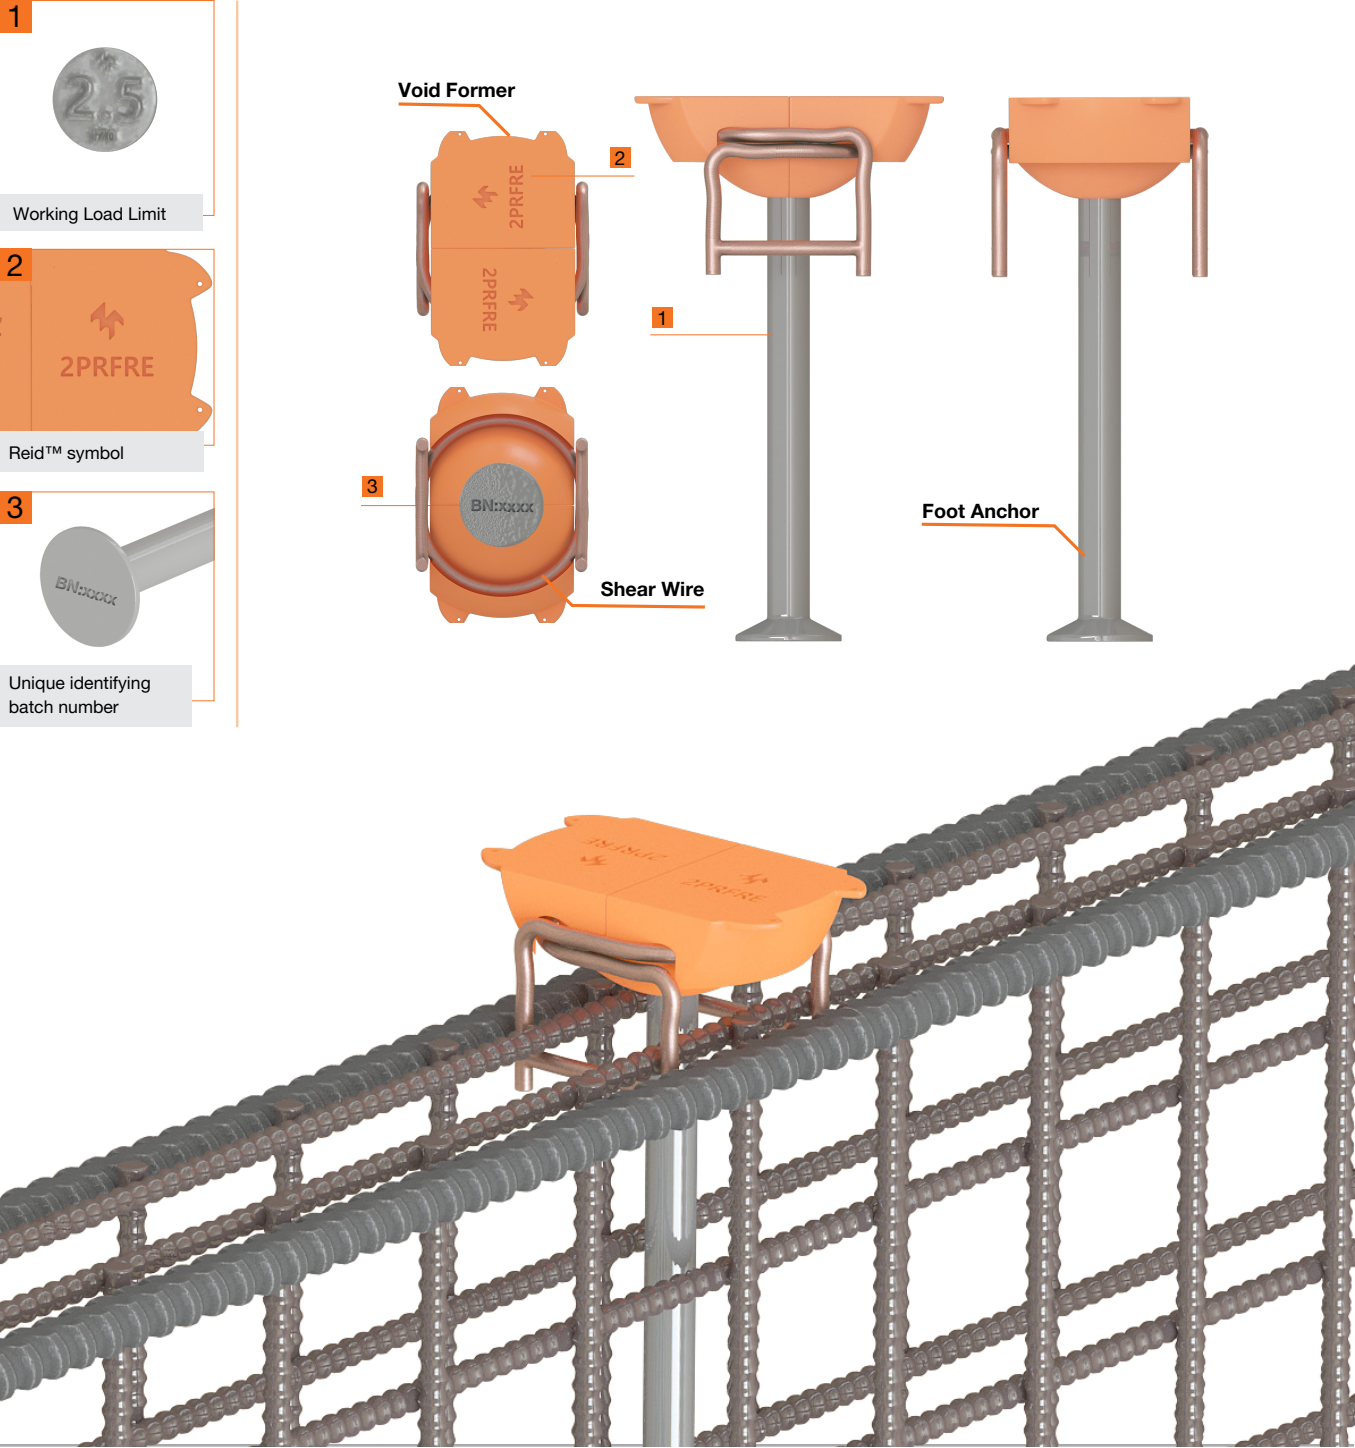

Installation Process

Edge Lift Anchor Installation 3Dx™, JAWS™ & EdgeMaster™

3Dx™



JAWS™



EdgeMaster™



Edge Lift Anchor Installation 3Dx™ & JAWS™

- Both of these anchor series require the use of a tension bar as set out in AS3850.1:2015 (+A1).
- Select the appropriate void based on anchor being use. Refer anchor compliance document for further info.
 - Flex open void to allow for anchor installation
 - Place anchor into void former
 - Insert void support place into back of void, if tying anchor into place. Alternatively, the support plate can be fixed to the formwork and the void/anchor assembly can be placed onto the support plate.
 - Locate & place anchor into nominate location, in accordance with approved drawings.
 - 3Dx anchors are not reliant on specific perimeter bar location, as such, they can be placed on the near face or in between the anchor legs.
 - Install anchor with central mesh and perimeter bar between anchor legs when single layer reinforcement is being used.



Add supplementary anchor reinforcement as follow;

- Tension bar (3Dx and JAWS)
- Shear bar (JAWS only)

These bar should be tied to the anchor only. Reid does not support the practice of welding to any anchor. Refer compliance doc for further information on bar sizes and locations.

Edge Lift Anchor Installation EdgeMaster™

This anchor uses a plastic Void Former, SwiftLift™ Foot Anchor and an EdgeLift™ Bracket in its assembly. It is sold pre-assembled and ready for install. Edgemaster contains 4 locating holes and can be fixed to the form via nailing or with double sided tape.

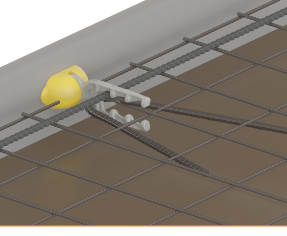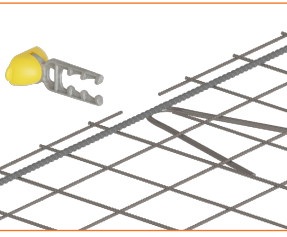

Example of 3Dx™ Installation



Void Removal 3Dx™, JAWS™ & EdgeMaster™

3Dx & JAWS Void Removal

1. Remove formwork from precast element
2. The voids have 2 holes located in the rear of the void, allowing for rods (or similar) to be installed.
3. While rods (or similar) are inseted into the void, cross exposed ends in to a "X", levering the void ends and allowing it to release the anchor.

Edgemaster Void Removal

1. Hammer a flat head screwdriver off centre into the void.
2. Lever void to release.
3. Repeat step 1 on other side.
4. Remove void.

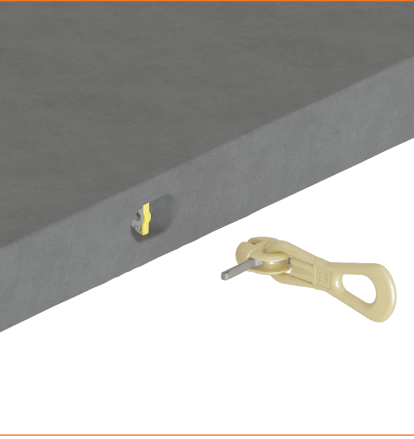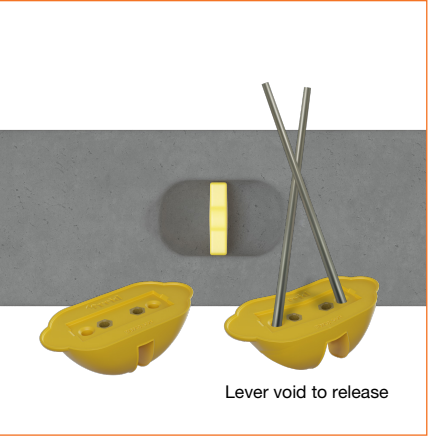



Customer Service

Reid™ Australia

Tel: 1300 780 250

Email: sales@reid.com.au

Web: www.reid.com.au

Reid™ Construction Systems (RCS)

AUS: 1 Ramset Drive, Chirnside Park, Victoria, Australia, 3116

NZ: 23-29 Poland Road, Glenfield, Auckland 0632

© Copyright September 2022. ITW Australia Pty. Ltd. ABN 63 004 235 063 trading as RCS.

In the interests of product improvement, RCS reserves the right to alter product specifications as required. Information included in this product catalogue is correct at time of printing. For further technical information go to www.reidconstructionssystem.com or contact RCS on the numbers indicated above.

Important Disclaimer: Any technical opinions, advice or data (together, the "Information") provided by RCS (a division of ITW Australia Pty Ltd) ("ITW") in this document is provided in good faith and to the best of ITW's knowledge, ITW makes no representation as to the accuracy or authenticity of the Information and reliance on any Information provided is entirely at the recipient's own risk. It is the responsibility of the recipient take all necessary precautions in verifying the accuracy of the Information and in assessing whether the Information is appropriate for its own requirements, including seeking its own independent engineering (or other) advice on the Information as appropriate. To the extent permitted by law, ITW will not be liable to the recipient or any third party for any direct or indirect loss or liability arising out of, or in connection with, the Information whether arising in contract, tort, under any statute or otherwise. This disclaimer also applies to Information provided by the employees, contractors or agents of ITW whether or not they are acting in their capacity as employees, contractors or agents of ITW.

